

MOS - QUATRO

MANUAL

The MOS Quatro is a four-way 19 inch microphone on-air switch for switching microphone lighting on for example the Yellowtec Mika microphone arms.
The four microphone ports switch separately from each other.



The indication LED's on the front panel of the MOS Quatro show the status of each microphone. The status LED indicates whether the microphone arms are on standby, fixed white light, or fading in and out.



Up to 4 microphone arms can be connected to the rear panel of the MOS-Quatro. The MOS-Quatro will control the lights of the connected arms in red for on-air and white for off-air.
The audio signal is routed directly from the connected microphone arm to a standard 3-pin XLR connector.

MOS - QUATRO

MANUAL

Connections from left to right


Power

9 to 18 volts DC

RJ11

Link connection for synchronisation with other MOS (Uno or Quatro)

Link1 = master and Link2 = slave




SUB-D GPI 1-2

GPI connection for microphone 1 and 2

Pin	Function	Signal
1	Microphone 1, +5 to +15 volt	GPI
2	Microphone 1, contact to GND	GPI
3	Microphone 2, +5 to +15 volt	GPI
4	Microphone 2, contact to GND	GPI
5	Activate status to GND	GPI
6	Microphone 1, voltage GND	Ground
7	Microphone 1, contact GND	Ground
8	Microphone 2, voltage GND	Ground
9	Microphone 2, contact GND	Ground

1 2 3 4 5 6 7 8

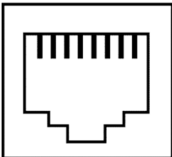

RJ45 GPI 1-2

GPI connection for microphone 1 and 2

Pin	Function	Signal
1	Microphone 1, +5 to +15 volt	GPI
2	Microphone 1, voltage GND	Ground
3	Microphone 1, contact to GND	GPI
4	Microphone 1, contact GND	Ground
5	Microphone 2, +5 to +15 volt	GPI
6	Microphone 2, voltage GND	Ground
7	Microphone 2, contact to GND	GPI
8	Microphone 2, contact GND	Ground






AeroAudio

WWW.AEROAUDIO.EU

MOS - QUATRO


MANUAL



SUB-D GPI 3-4

SUB-D GPI 3-4

Pin	Function	Signal
1	Microphone 3, +5 to +15 volt	GPI
2	Microphone 3, contact to GND	GPI
3	Microphone 4, +5 to +15 volt	GPI
4	Microphone 4, contact to GND	GPI
5		
6	Microphone 3, voltage GND	Ground
7	Microphone 3, contact GND	Ground
8	Microphone 4, voltage GND	Ground
9	Microphone 4, contact GND	Ground

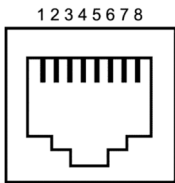

RJ45 GPI 3-4

GPI connection for Microphone 1 and 2

Pin	Function	Signal
1	Microphone 3, +5 to +15 volt	GPI
2	Microphone 3, voltage GND	Ground
3	Microphone 3, contact to GND	GPI
4	Microphone 3, contact GND	Ground
5	Microphone 4, +5 to +15 volt	GPI
6	Microphone 4, voltage GND	Ground
7	Microphone 4, contact to GND	GPI
8	Microphone 4, contact GND	Ground



AeroAudio

WWW.AEROAUDIO.EU

STEENWEG 148C - 9810 NAZARETH - BELGIUM - T +32 (0)9 396 76 40 - INFO@AEROAUDIO.EU



AeroAudio


WWW.AEROAUDIO.EU

MOS - QUATRO

MANUAL

XLR 5p female


Microphone arm 1

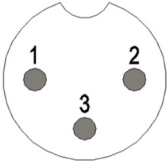

XLR 3p male

Microphone 1 output audio signal

Pin	Function	Type
1	Shield	Shield
2	Signal +	Input
3	Signal -	Input

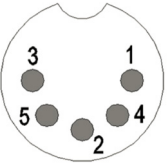

XLR 5p female

Microphone arm 1

Pin	Function	Type
1	Shield	Shield
2	Signal +	Input
3	Signal -	Input
4	LED + 12 volt	Output
5	Led - 12 volt	Output

XLR 3p male

Microphone 2 output audio signal

XLR 5p female

Microphone arm 3

XLR 3p male

Microphone 3 output audio signal

XLR 5p female

Microphone arm 4

XLR 3p male

Microphone 4 output audio signal

Dimensions

19 inch, 1HE

Depth: 22.2cm

Weight: 2.6kg



AeroAudio

WWW.AEROAUDIO.EU

STEENWEG 148C - 9810 NAZARETH - BELGIUM - T +32 (0)9 396 76 40 - INFO@AEROAUDIO.EU

MOS - QUATRO

MANUAL

Safety First!

- Caution: hot and sharp surfaces ! This professional device should only be installed by qualified personnel.
- Check the cardboard box for any damage upon receipt of the goods. In case of a damaged box, please contact your distributor contact your distributor before opening the box.
- Read all documentation before using the unit.
- Keep all documentation for future use.
- Keep the box and packing materials even if the equipment has arrived in good condition.
- Should you ever need to ship the equipment, use only the original factory packaging.
- Do not spill water or other liquids in or on the unit.
- Always use the power supply provided.
- Make sure the outlets match the power requirements listed on the back of the power supply.
- Do not use the unit if the power cord is frayed or broken.
- Turn off and disconnect the devices from the power supply before making any connections.
- Do not use the unit near heaters, heating vents, radiators, or other devices that produce heat.
- Do not use the unit on a surface or in an environment that may interfere with the normal flow of air around the unit.
If the unit is used in an extremely dusty or smoky environment, the unit should be "dusted" periodically.
- Do not remove the cover. Removing the cover will expose you to potentially dangerous volt voltages.
- In case of malfunction, this unit should only be serviced by qualified service personnel.
- Always follow the instructions of the supplier and manufacturer - Use only manufacturer specified accessories, spare and replacement parts.
- Use the device only for the application the manufacturer intended.

